

WHEN THE INSTRUMENT HAS ARRIVED

The instrument is strictly factory inspected. After it has arrived, however, check the quantities of accessories, etc. and appearance and operation of the instrument to make sure nothing is wrong.

If some accessories are missing or the operation is poor, contact the nearest service agent given on the back cover of the manual.

1. ACCESSORIES

The instrument is furnished with accessories given in Figure 1 and Table 1. Check the quantities, etc. against them.

• Checking Model and Specifications of the 2533E

Model	Suffix Code	Specifications
2533E31	Single-Phase, AC
2533E32	Three-Phase 3-Wire, AC
2533E33	Three-Phase 4-Wire, AC
2533E41	Single-Phase, DC/AC
2533E42	Three-Phase 3-Wire, DC/AC
2533E43	Three-Phase 4-Wire, DC/AC
	-C1	GP-IB interface
	-C2	RS-232-C interface
	-1	Rated supply voltage setting: 100 VAC (50/60 Hz)
	-3	Rated supply voltage setting: 115 VAC (50/60 Hz)
	-5	Rated supply voltage setting: 200 VAC (50/60 Hz)
	-7	Rated supply voltage setting: 230 VAC (50/60 Hz)
	-M	UL/CSA standard power cord +3-pin to 2-pin adapter (Part number: A1253JZ)
	-D	UL/CSA standard power cord (Rating: 125 VAC, 7 A) (Part Number: A1006WD)
	-F	VDE standard power cord (Rating: 125 VAC, 10 A) (Part Number: A1009WD)
	-R	VDE standard power cord (Rating: 240 VAC, 10 A) (Part Number: A1024WD)
	-J	BS standard power cord (Rating: 250 VAC, 5 A) (Part Number: A1023WD)
	/FREQ	
	/INTEG	

• Check Accessories

The following accessories are supplied with the 2533E.

