# **Behlman Power Products**

AC Power Source/ Frequency Converter

## P1352

#### **FEATURES**

- Low output THD
- Unique overload protection
- Remote programming



#### CLEAN AC POWER WITH MICROPROCESSOR CONTROL AND VACUUM FLUORESCENT DISPLAY

In the P1352 you'll find the quality features you expect from Behlman; fully adjustable voltage and frequency, low-output THD, high efficiency, plus excellent line and load regulation. There's also a unique overload protection system that folds back voltage to maintain rated current without output waveform distortion. The unit can be controlled with the front panel pushbuttons or remotely using the standard RS232 interface.

Available options include IEEE-488 interface, extended frequency range, 45 Hz to 1000 Hz and rack mount kit.

Small size, quiet operation and high efficiency make the P1352 ideal for industrial product testing, precision avionic test, power conversion and Automatic Test Equipment testing.

## **INPUT**

**Voltage:** 120 VAC, +/- 10% **Frequency:** 47-440 Hz

#### **OUTPUT**

**Power:** 1350 VA

Voltage: 0-135 V or 0-270 V

**Frequency:** 45-500 Hz (Option E: 45-1000 Hz)

Current: 10 Amps, 0-135 V Range,

5 Amps, 0-270 V Range

**Current limit:** Settable from 0 to maximum amps

Load Crest Factor: 3:1

Load Power Factor: 100% of rated output into any

power factor load

**Distortion:** 1.0% THD typical, measured at full load,

115 Volts, 60 Hz

**Line Regulation:** +/- 0.1% for +/- 10% line change **Load Regulation:** +/- 0.7%, no load to full load

**Efficiency**: 80% typical

### **CONTROLS / INDICATORS**

Power On/Off: Rocker type switch

**Display:** Vacuum fluorescent display with 24

characters x 2 lines...displays volts, amps, frequency and current limit... fault indication for over voltage O/V), over current (O/I), over temperature (O/T), constant current (C/C) and overload latch (O/L), Watts (W), power factor (PF)

**Shift push-button:** Set resolution; 0.1, 1.0, 10.0, 100.0 **Mode push-button:** Selects the parameter required

**Up push-button:** Increment up **Down push-button:** Increment down

Reset: Reset system to default setting

Output On/Off: Push button switch

Range: Push button switch (High/Low)

Local/Remote: Recessed slide switch

**Indicators:** Output on, high range, busy

Remote interface RS232 interface

Settings and measurements: See Table 1 (reverse)

#### PROTECTIVE CIRCUITS

Input: Fuse

Thermal:

Constant Current: Overload automatically causes voltage

fold-back to provide maximum current without distorting output waveform

**Short Circuit:** Short circuit overload electronically

latches output open to protect load...
power restored by recycling input power

Internal temperature sensor prevents

heat damage

Over voltage: Voltage in excess of 20% of maximum

electronically latches output to protect load... power restored by recycling input

power

## **MECHANICAL & ENVIRONMENTAL**

**Dimensions:** High-strength bench top chassis

with removable rubber feet, 3.5"H x 17"W x 17.5"D (8.9 cm x 43.2 cm x 44.5 cm)

**Weight:** 39 lbs (17.6kgs),

Operating Temperature: 32° to 131° F (0° to 55° C)
Input Connections: IEC320 C-20 receptacle with sixfoot line cord with NEMA 5-15 plug

Output Connections: Enclosed terminal block

Remote control: DB-9 connector

**Table 1: P1352 Settings and Measurements** 

	Setting Resolution	Accuracy
Voltage	0.1 V	+/- 0.5% of full scale +/- 1 LSB (45-500Hz) +/- 0.7% of full scale +/- 1 LSB (500-1000Hz)
Frequency	0.1 Hz	+/- 0.1 Hz
Current	NA	+/- 1% of full scale +/- 0.1 A
Current Limit	0.1 A	+/- 0.2 A
Watts	NA	+/- 2.5% of full scale (150 W to FS)
Power Factor	NA	+/- 0.035 (150 W to FS)

# Fault indications for the following:


O/V: Over Voltage
O/I: Over Current
O/T: Over Temperature
C/C: Constant Current
O/L: Overload latch

# **OPTIONS: Contact factory for additional options.**

E: Extended frequency range, 45-1000 Hz

I: IEEE-488 interface RM: Rack Mount kit

**USB:** Adapter for USB to serial port

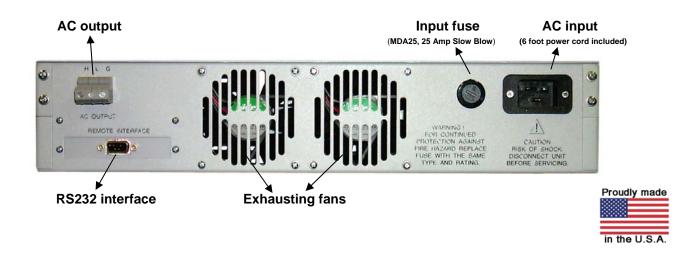

# www.behlman.com

ORBIT POWER GROUP
Behlman Electronics

Headquarters: 80 Cabot Court, Hauppauge, NY 11788 631 435-0410 800 874-6727 Fax: 631 951-4341 2363 Teller Road, Suite 108 Newbury Park, CA 91320 805 375-7046 800 456-2006 Fax: 805 498-2147